



RecPath™ INSTALLATION DATA SHEET

Made from 100% recycled polyester, Mobi-Mat® range offers the RecPath™, the lightest roll-out environmentally friendly mat for creating the best ADA compliant outdoor access ways in minutes.

Supplied as a ready-to use kit in a cardboard box, the kit includes one RecPath™ roll and the necessary accessories for installation including X-shape connector bar at ends, staple pack, and pair of gloves.

1. Pre-installation

Prepare the area prior to installation of the RecPath™ by leveling the ground surface with a rake to clear debris, large stones and foreign objects.

2. Start creating your beach pathway

Unroll the RecPath™ and lay it in the desired position (Fig. 1).

Check the mat surface and place the smooth side facing up and the corrugated side facing down in contact with the ground.

Begin by aligning one end completely with the sidewalk or boardwalk you are extending it from. Secure the starting end of the mat, using the U-shaped staples provided (Fig. 2).

On flat terrain, insert staples through the connector holes, as close as possible to the sidewalk/boardwalk so there is no gap.

On sloped or heavy traffic areas, insert staples through the connector holes and eyelets.

3. Stretch & Anchor your mats down

Stretch the Mobi-Mat® from the other end; utilize the U-shaped staples inserted through the eyelets as a tensioning tool to gently stretch the mat. (Fig. 3).

Secure the mat end by fastening the end with U-shaped staples inserted through the connector with a hammer (Fig. 2).

To secure the mat lengthwise, insert a staple through the eyelet positioned on the lengthwise side of the mat (Fig. 4).

4. Connecting Multiple RecPath™

Repeat 1 and 2 (Fig. 1 & 2).

Use end connectors: lay mat ends side by side and then slide the X-shaped connector bar into position to link both mat ends together (Fig. 5).

Repeat 3 (Fig. 3 & 2).

5. Maintenance

Using a broom or leaf blower is the preferred method for keeping the Mobi-Mat® surface free of sand and debris.

If too much sand accumulates underneath, roll back the mats and level the ground. Then re-do installation.

Optional RecPath™ installation

Creating a Change in Path Direction or Resting Areas with a "T" or "L" shape

Overlap the mats at an angle to create "T" or "L" shape paths to create a change in path direction or resting areas for wheelchair users and baby strollers. (Fig. 6).

No visible end

Dig a 4" (10cm) deep and 3" (8cm) wide trench at the end of the RecPath™, position the mat end connector straight down at 30 degrees into the sand and anchor the mat down using the U-shaped staples and bury it.



Fig. 1

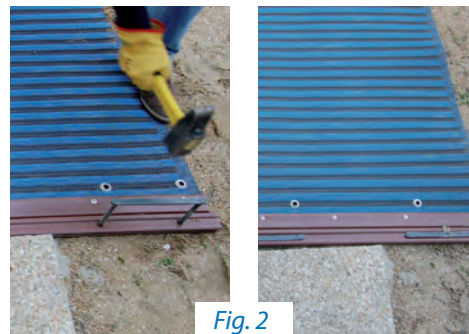


Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Usine de Bourisson BP 40020 - 16400 La Couronne - France
Tél. + 33 (0) 545 677 030 - Fax. + 33 (0) 545 678 160

deschamps@deschamps.fr